

# BETTER BARRIERS

# BARRICADE & BARRIER SAFETY FENCE




## ACCESSORIES REQUIRED

Suggested accessories required for installation of 50 feet of our Better Barriers™ Barricade or Barrier fence.

- 7 steel T-Posts (minimum 6 feet high)
- 35 locking ties approximately 8"-10" long

## INSTALLATION INSTRUCTIONS

1. T-Posts should be inserted a minimum of 1.5' in the ground and a maximum of 8' apart.
2. Secure the fence and the T-Post together using locking ties spaced at 1' intervals (see illustration).
3. To connect fencing sections, overlap 2 strand sections from each end and weave a 1" x 2" slat through the overlapped strand.
4. Fence should be tensioned by hand only. DO NOT USE MECHANICAL TENSIONERS.

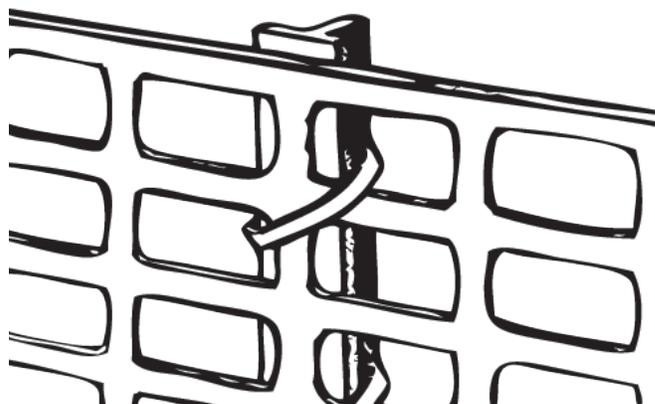

Quest Brands Inc.  
2545 Innovation Drive  
London ON N6M 0C8



Since 1979

toll free: 1.888.920.3818  
[questbrands.ca](http://questbrands.ca)