

QUICK-START GUIDE

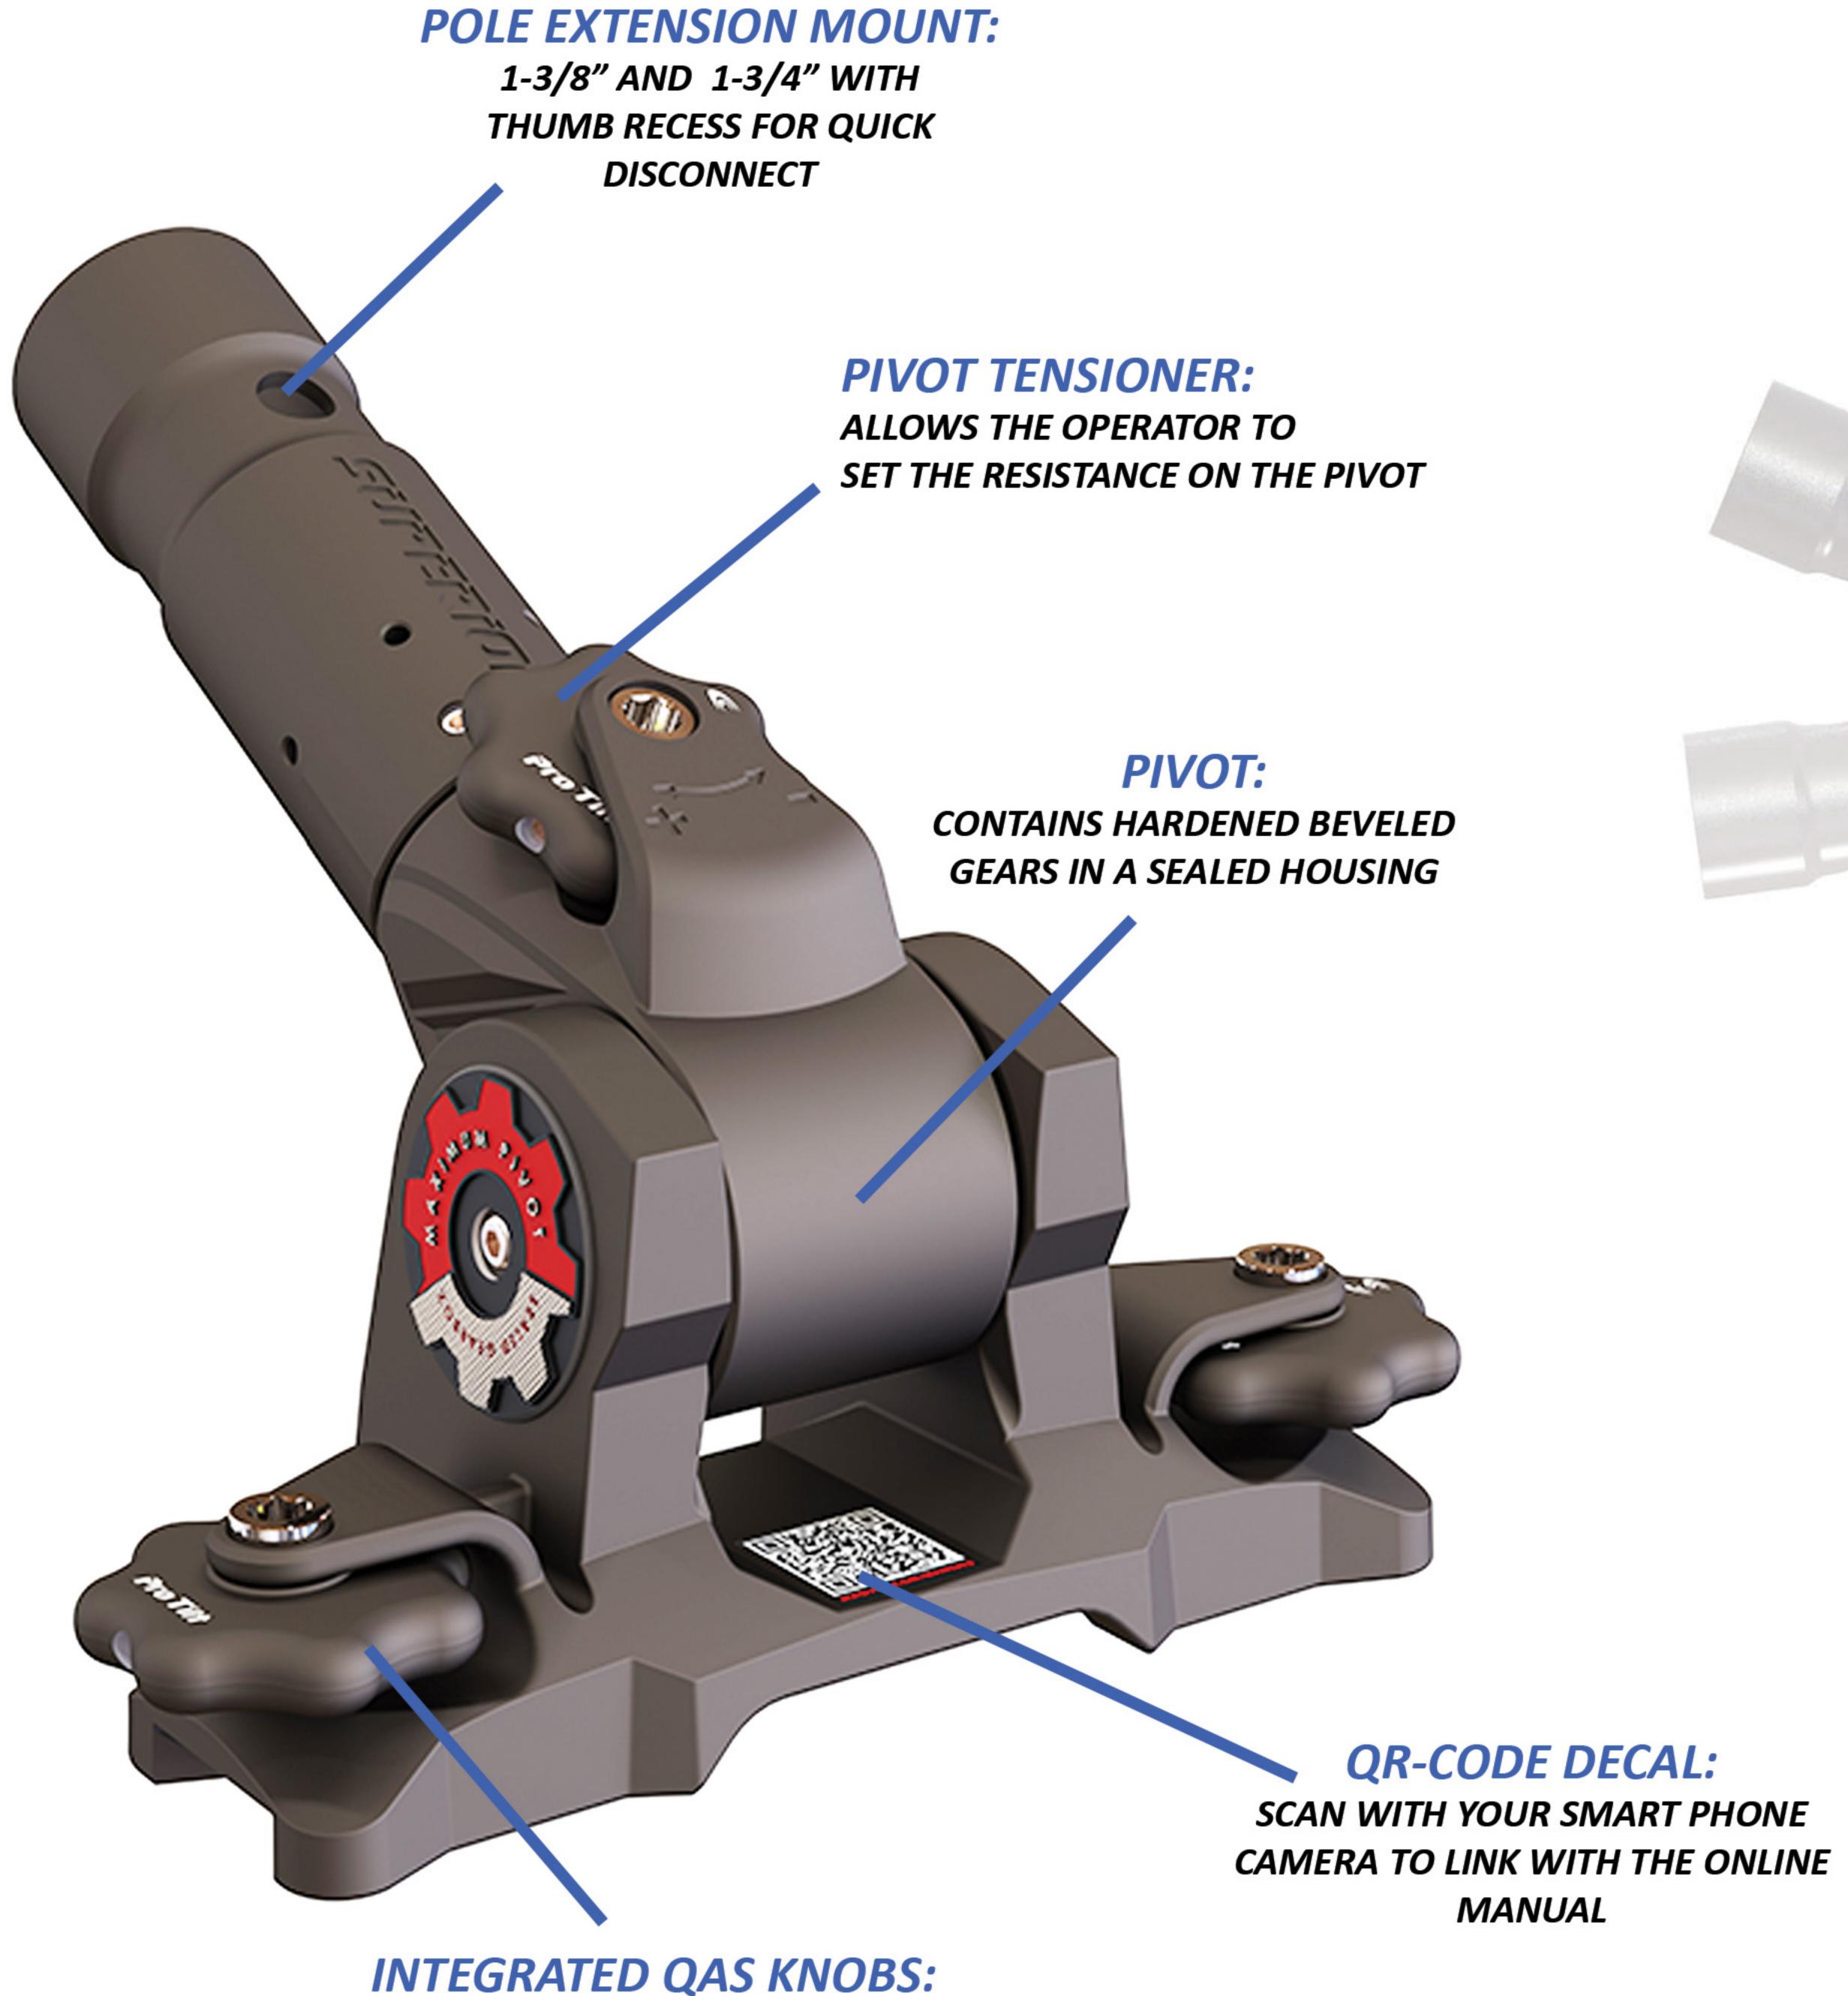

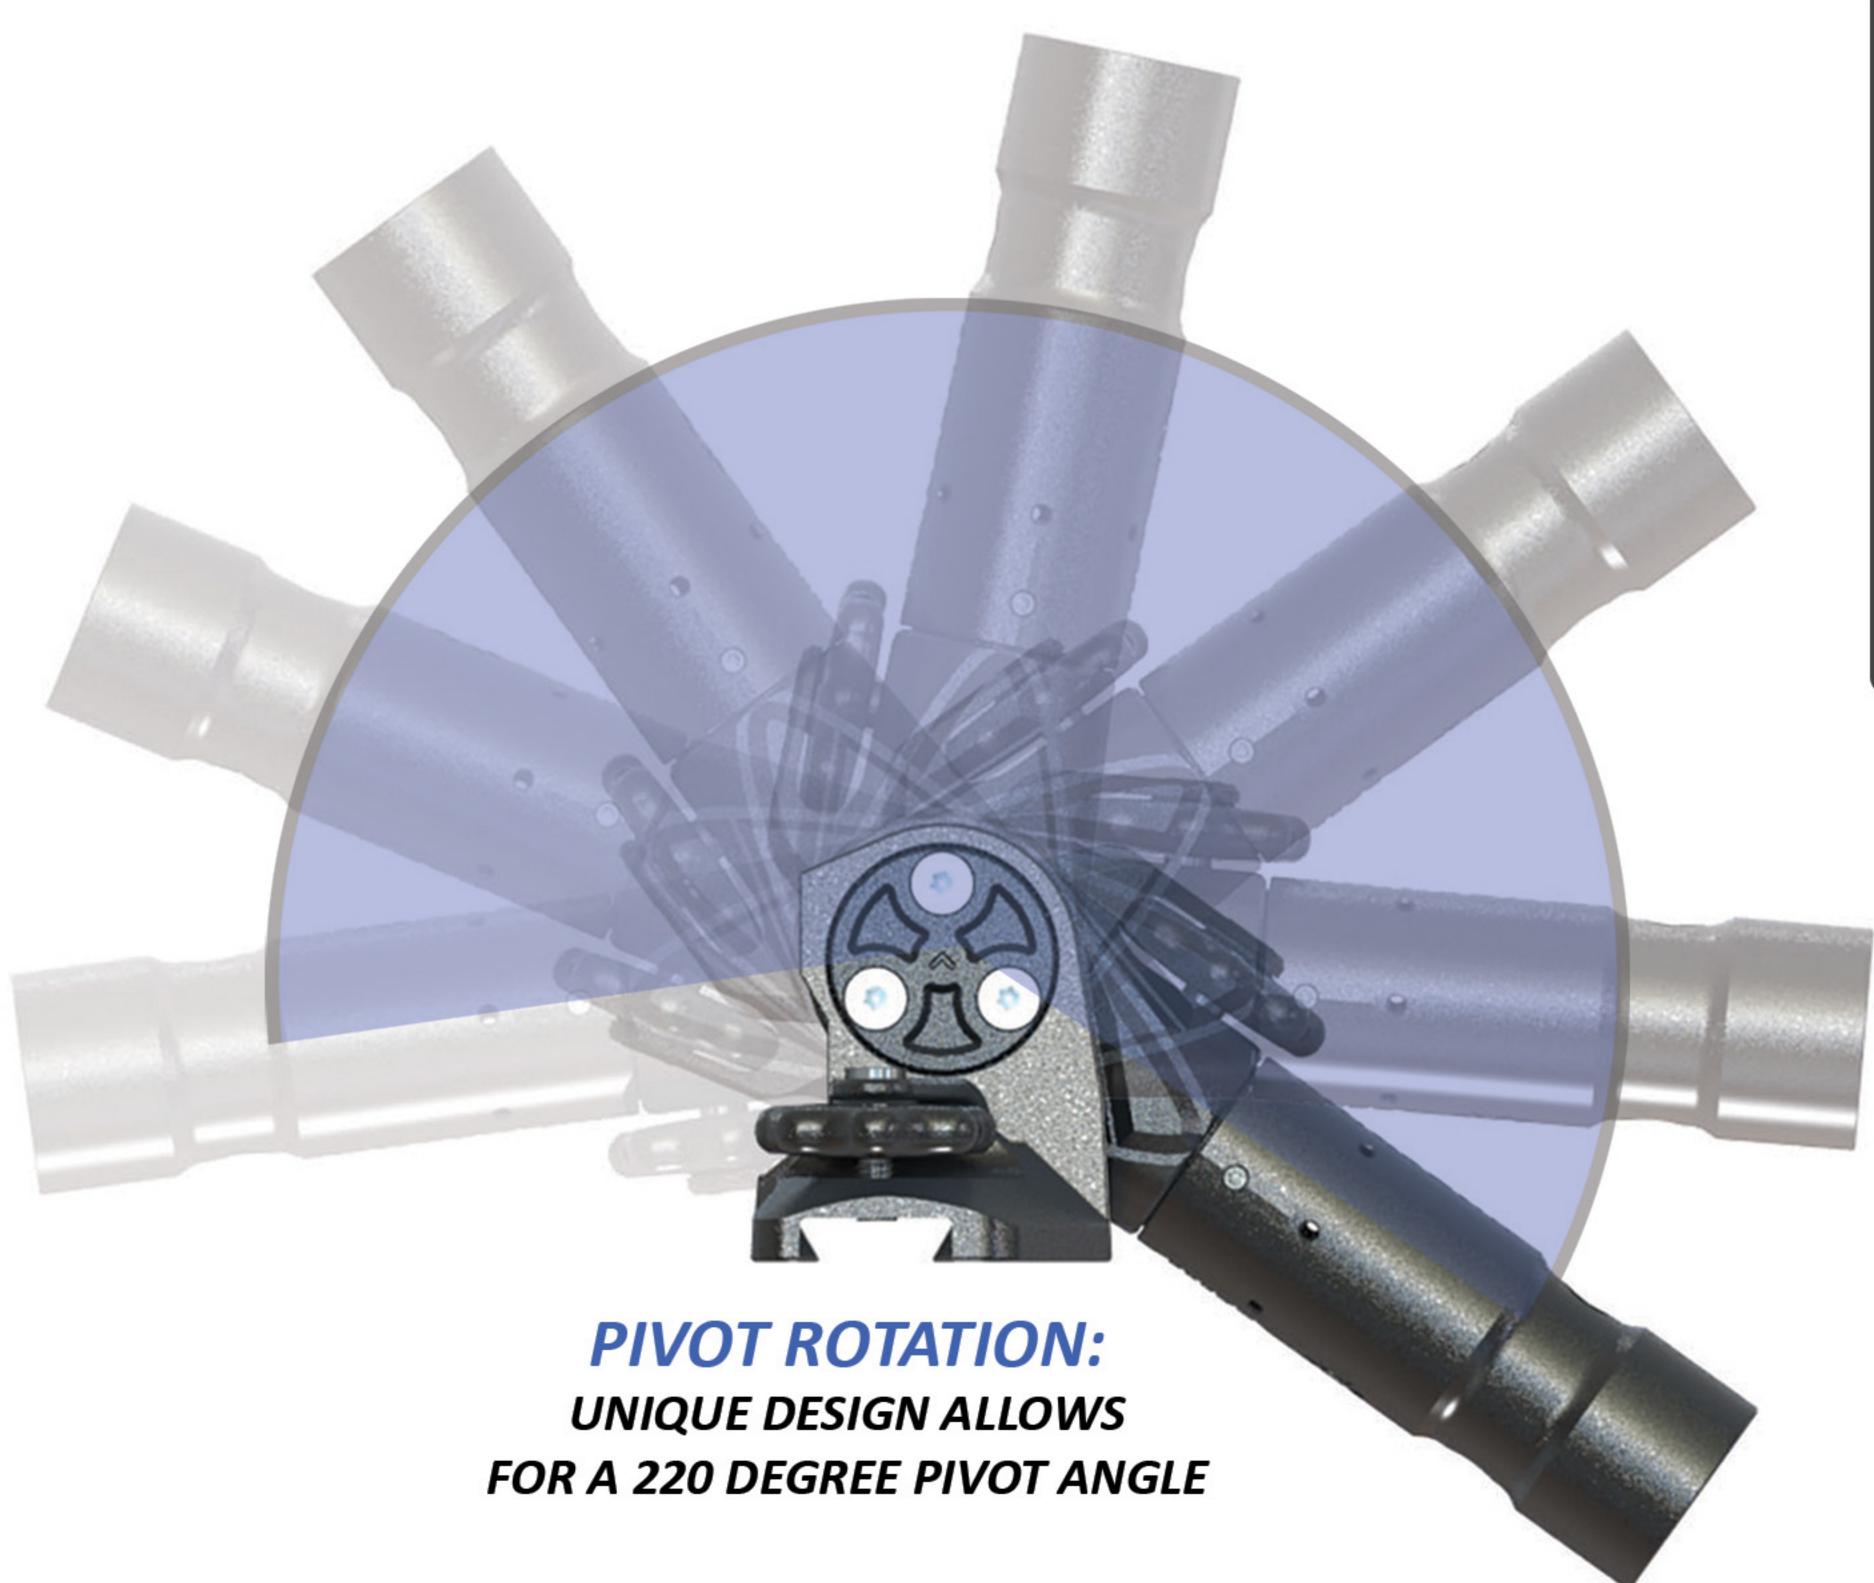

QUICKLY ATTACH AND REMOVE


FROM FLOATS WITHOUT TOOLS





REGISTER BY SCANNING WITH SMART PHONE CAMERA



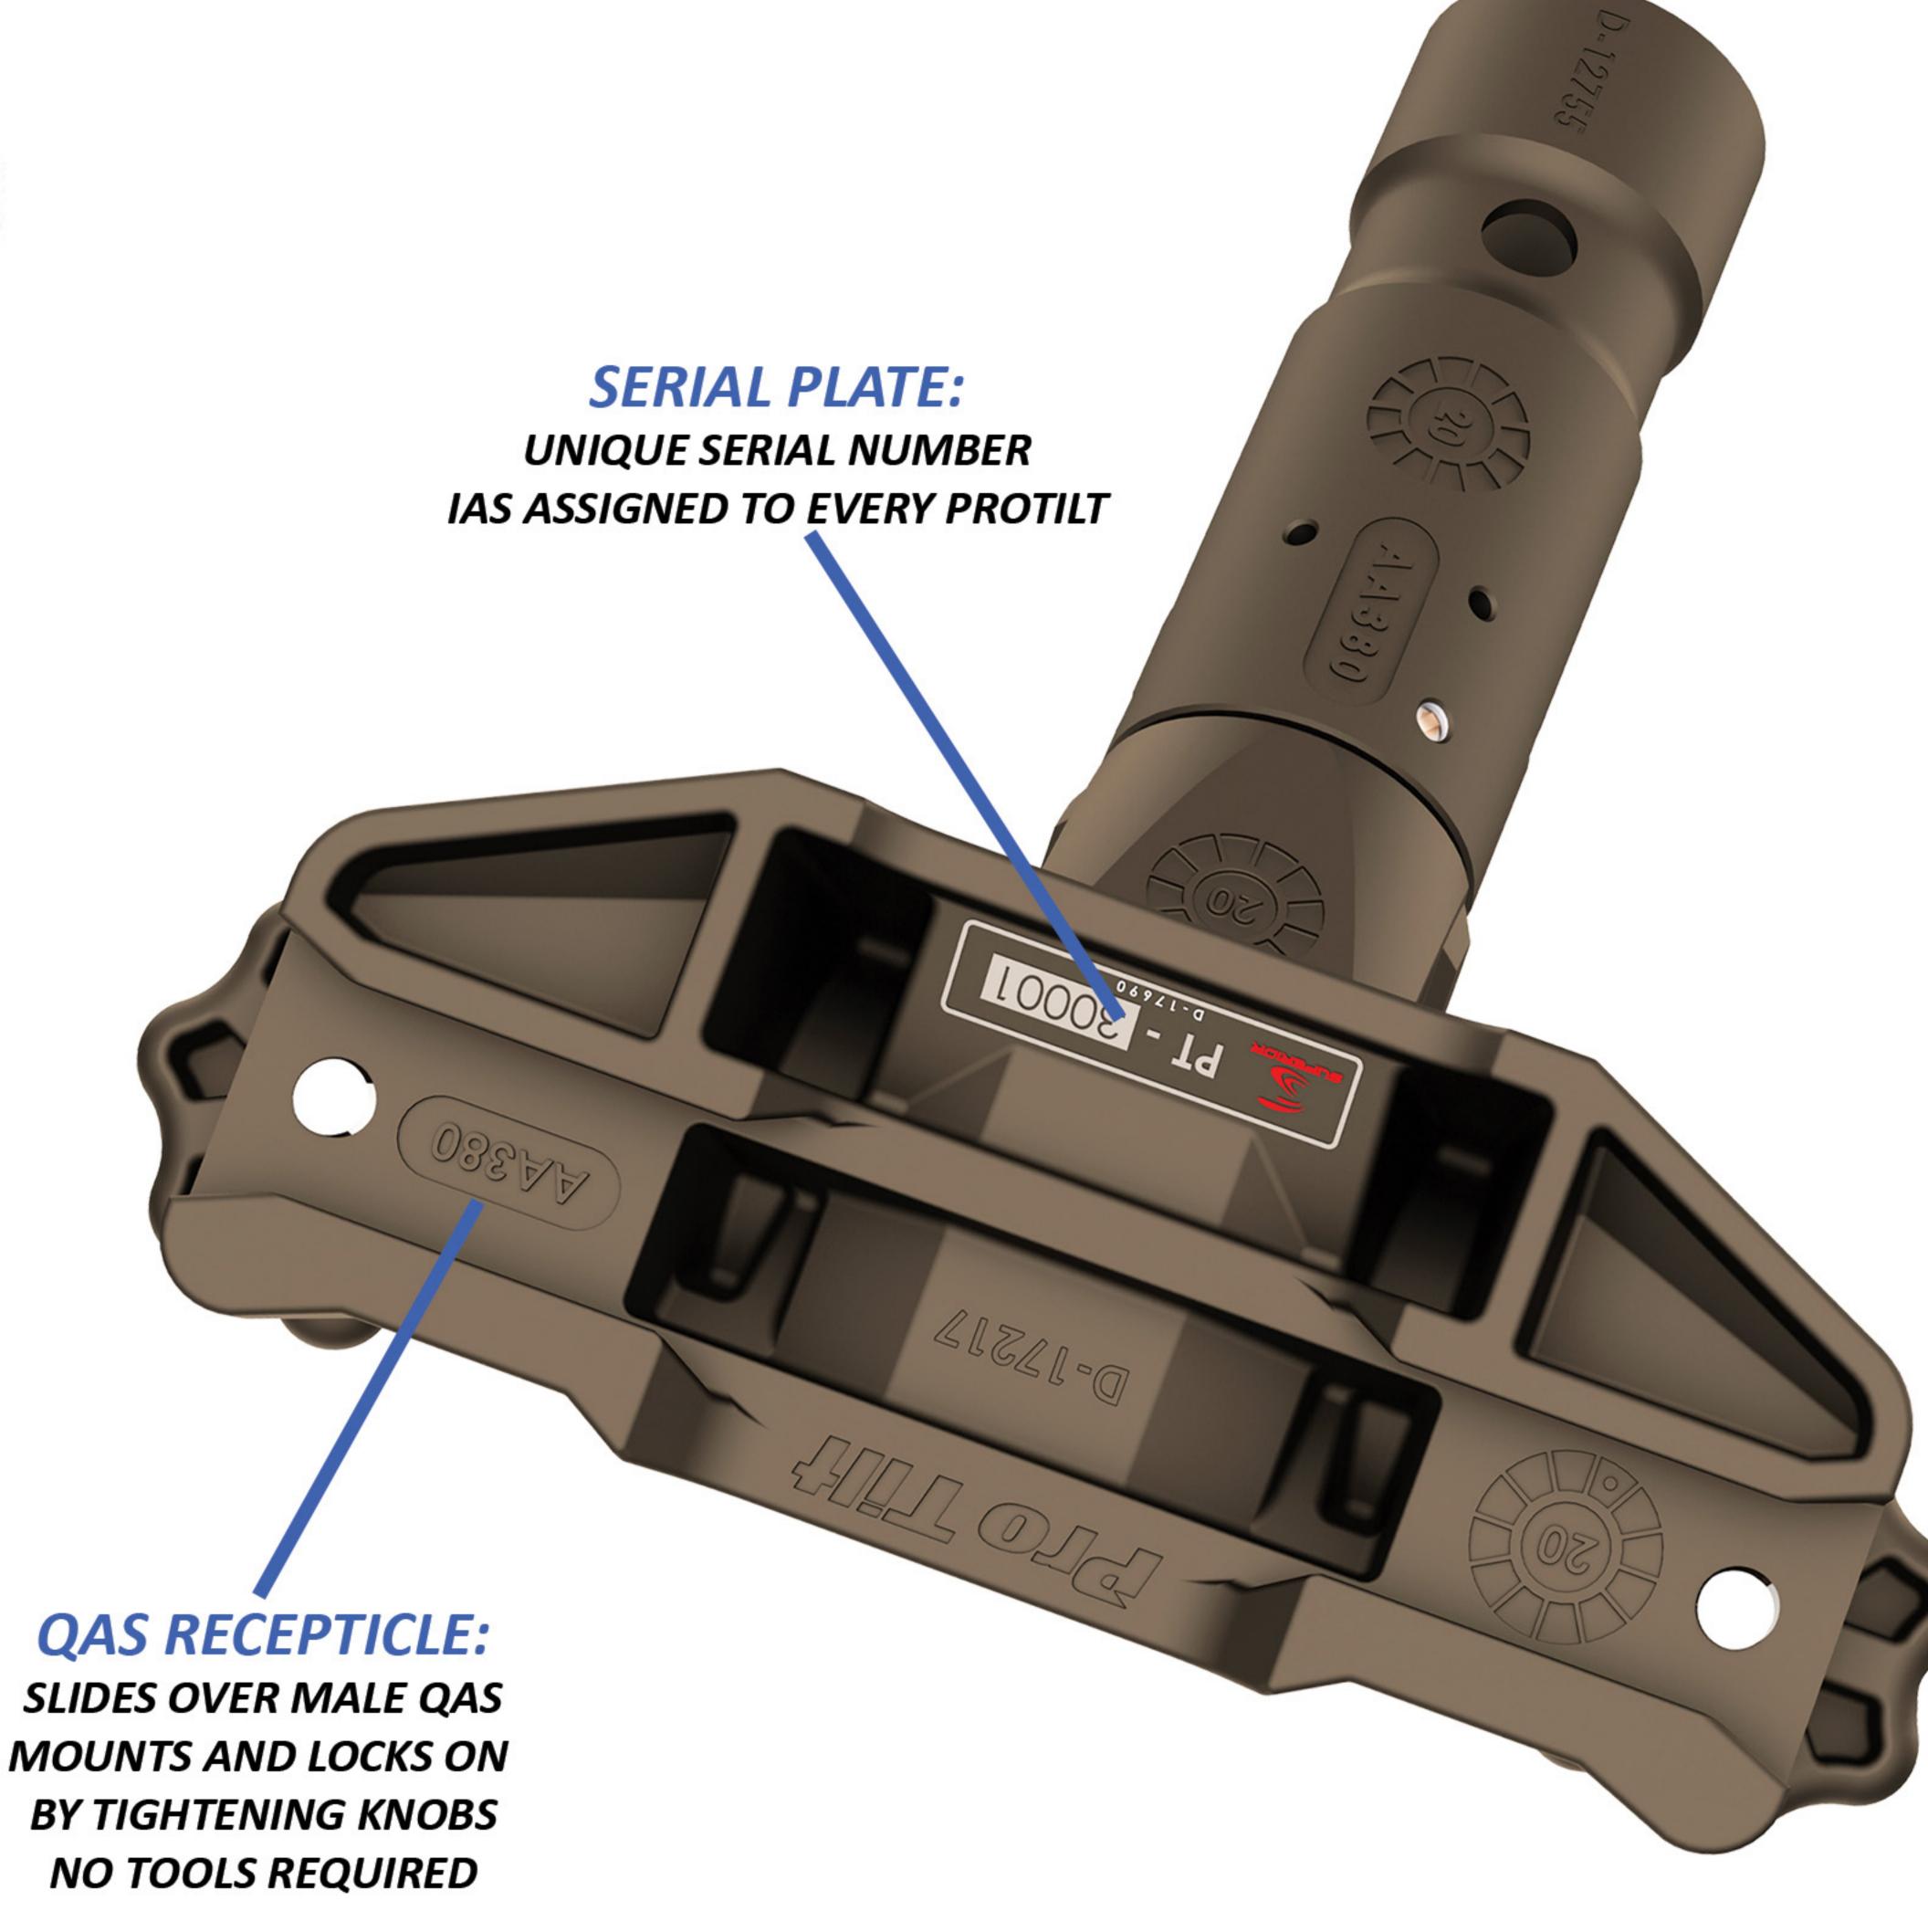



Full manual available online at www.magvibe.com/manuals or scan the QR code with your smart phone camera

QUICK-START GUIDE





Mounting

QUICK ATTACH SYSTEM

ProFloat


- 1. Align and slide the ProTilt onto QAS mount.
- 2. Center the ProTilt in the middle of the mount.

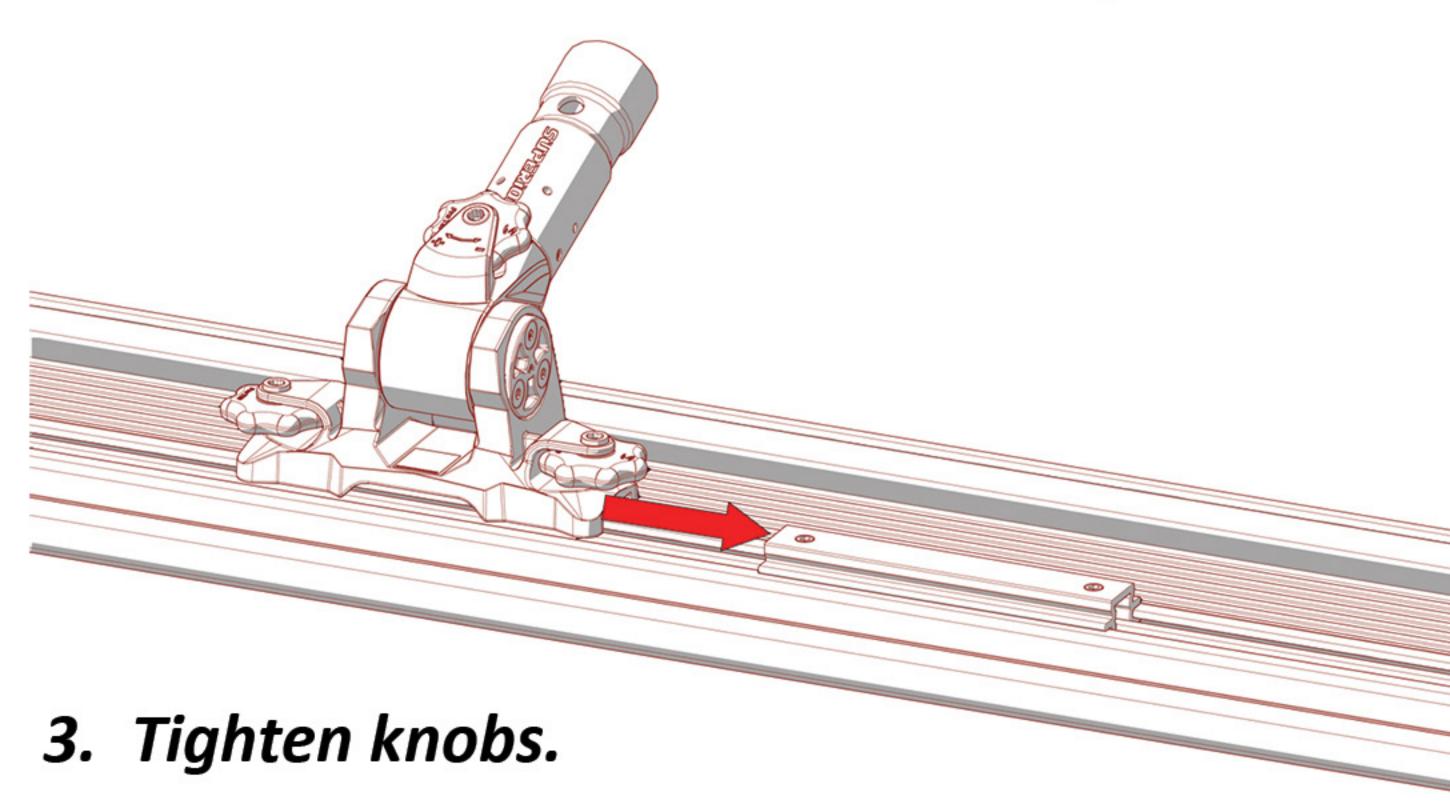

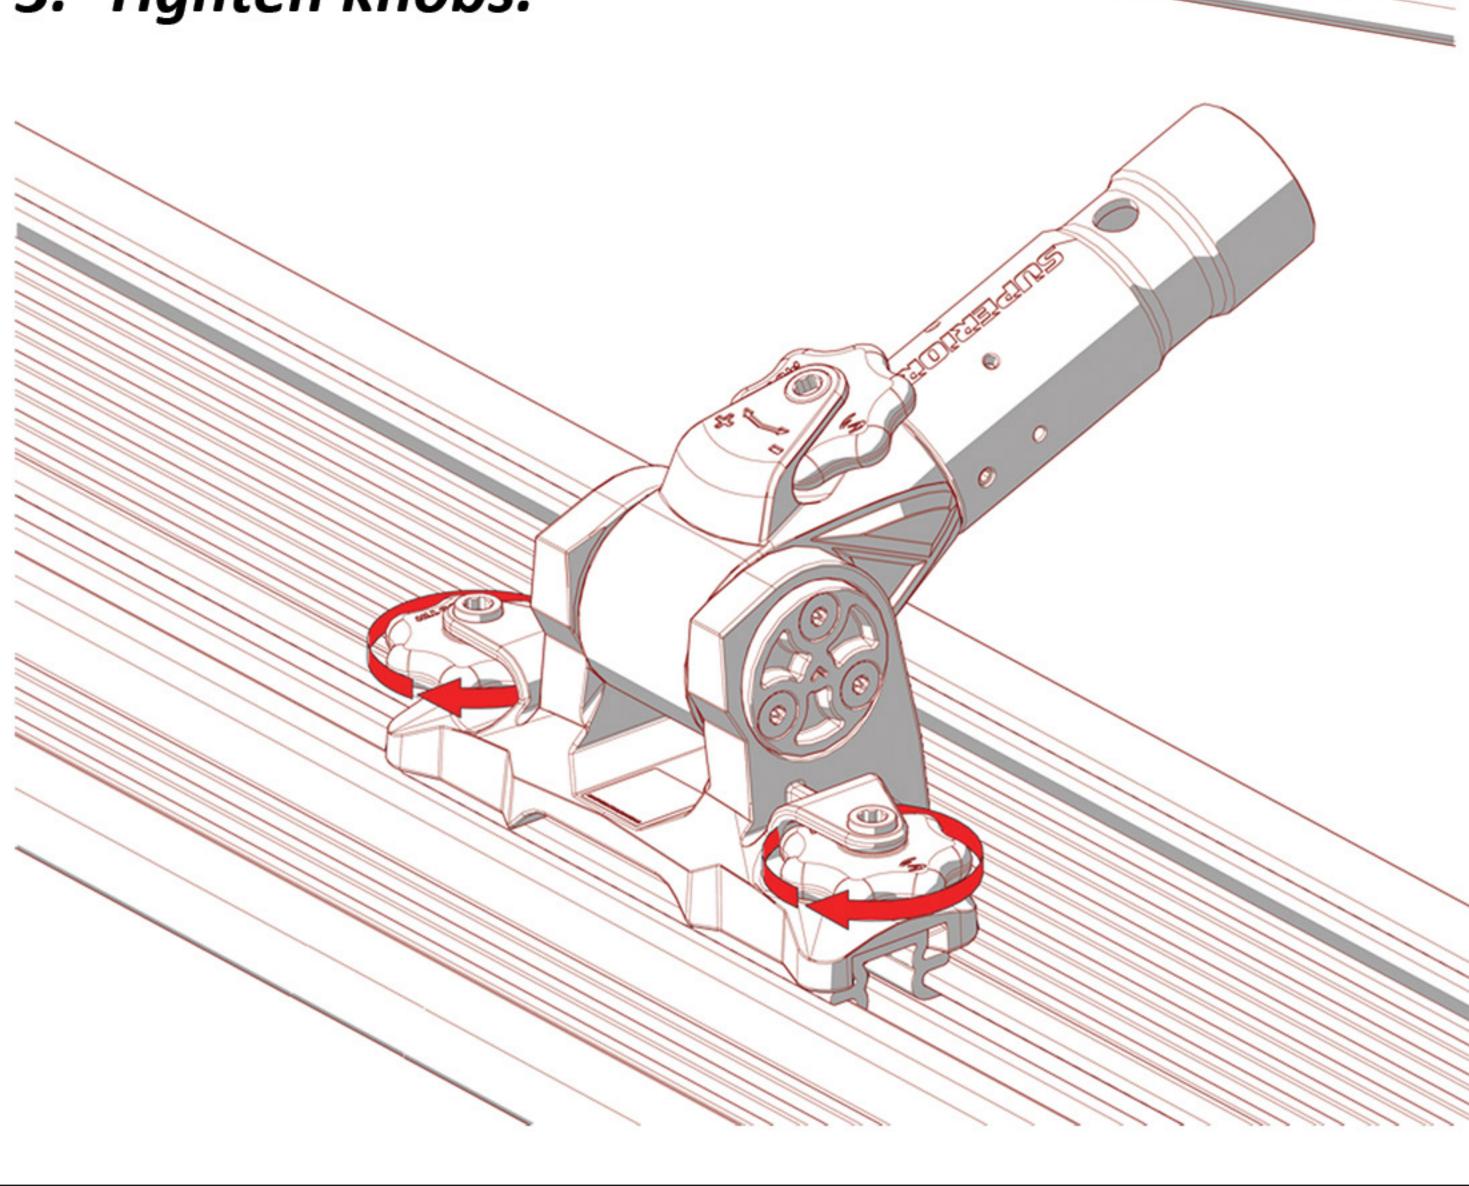


Maglibe

- 1. Slide the ProTilt onto MagVibe QAS mount.
- 2. Align the ProTilt in the center of the MagVibe.

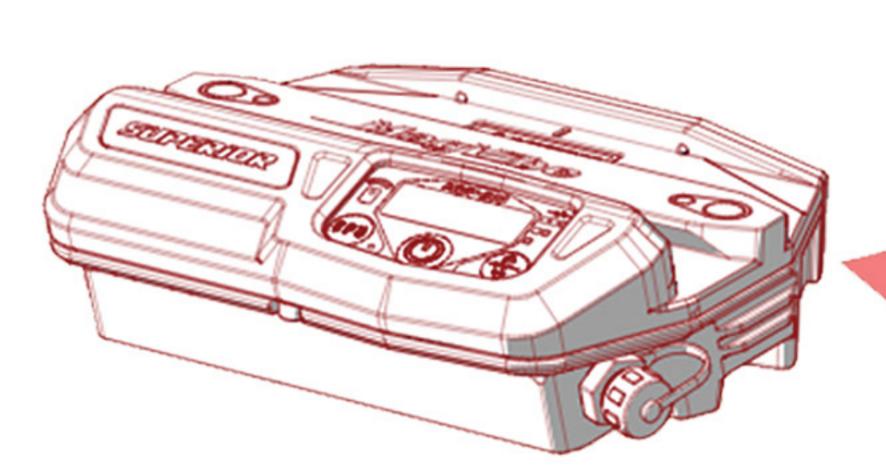


3. Slide the MagVibe and ProTilt onto the QAS

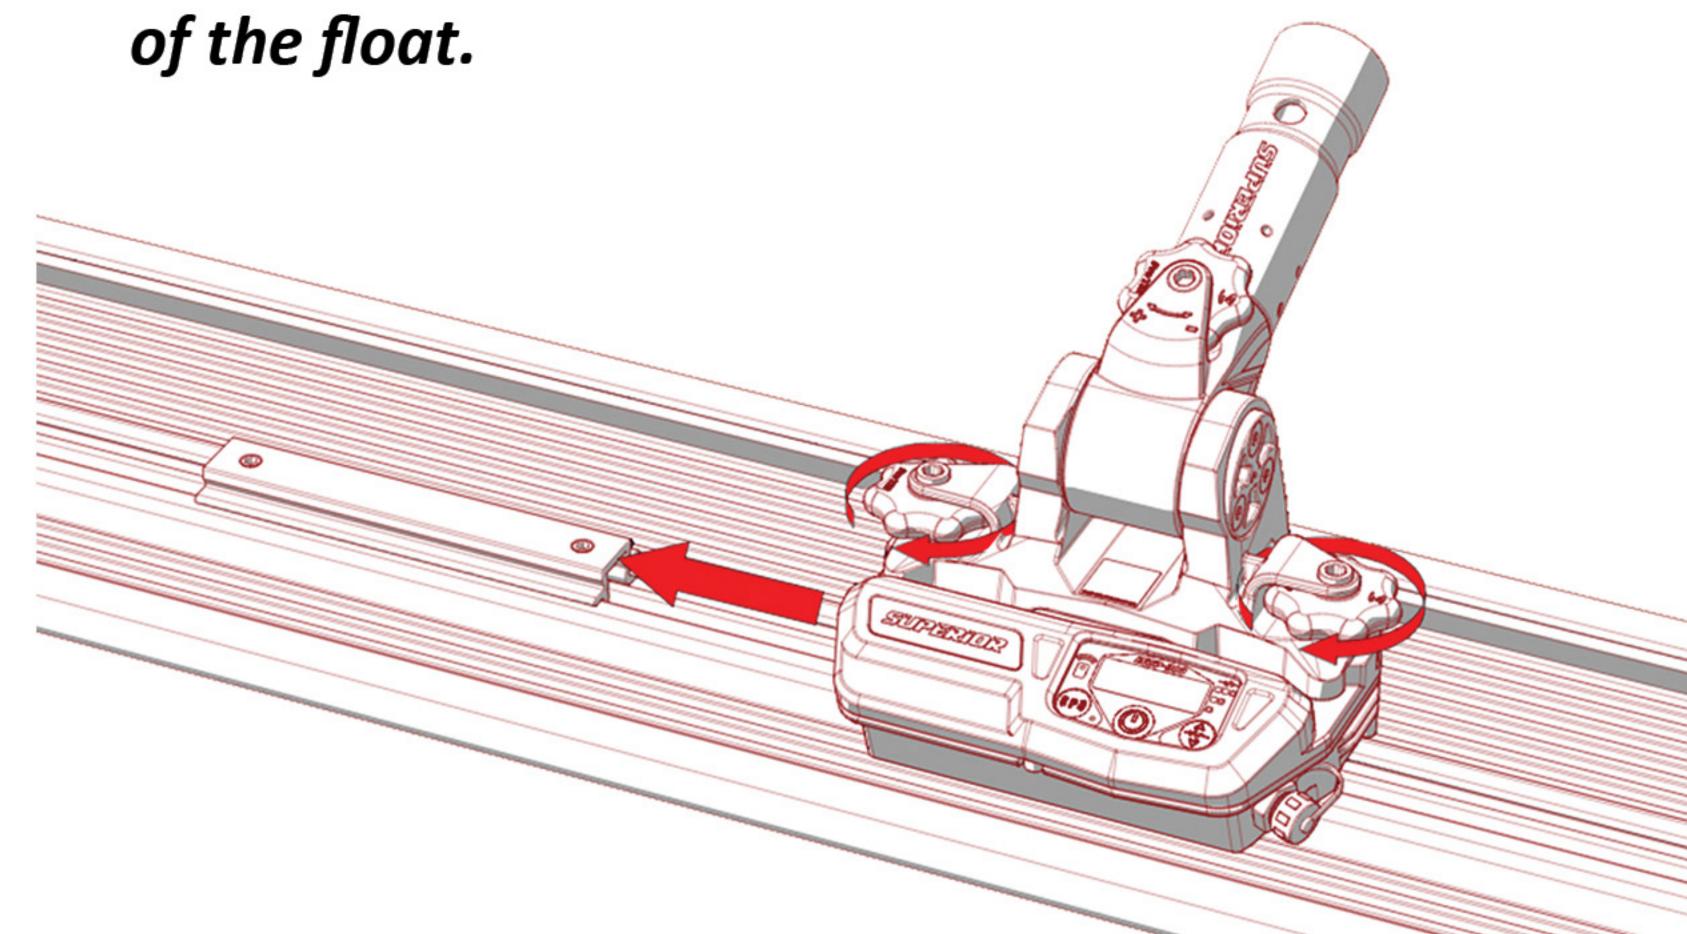

- 4. Center in the middle of the mount.
- 5. Tighten knobs.

Pole Extension

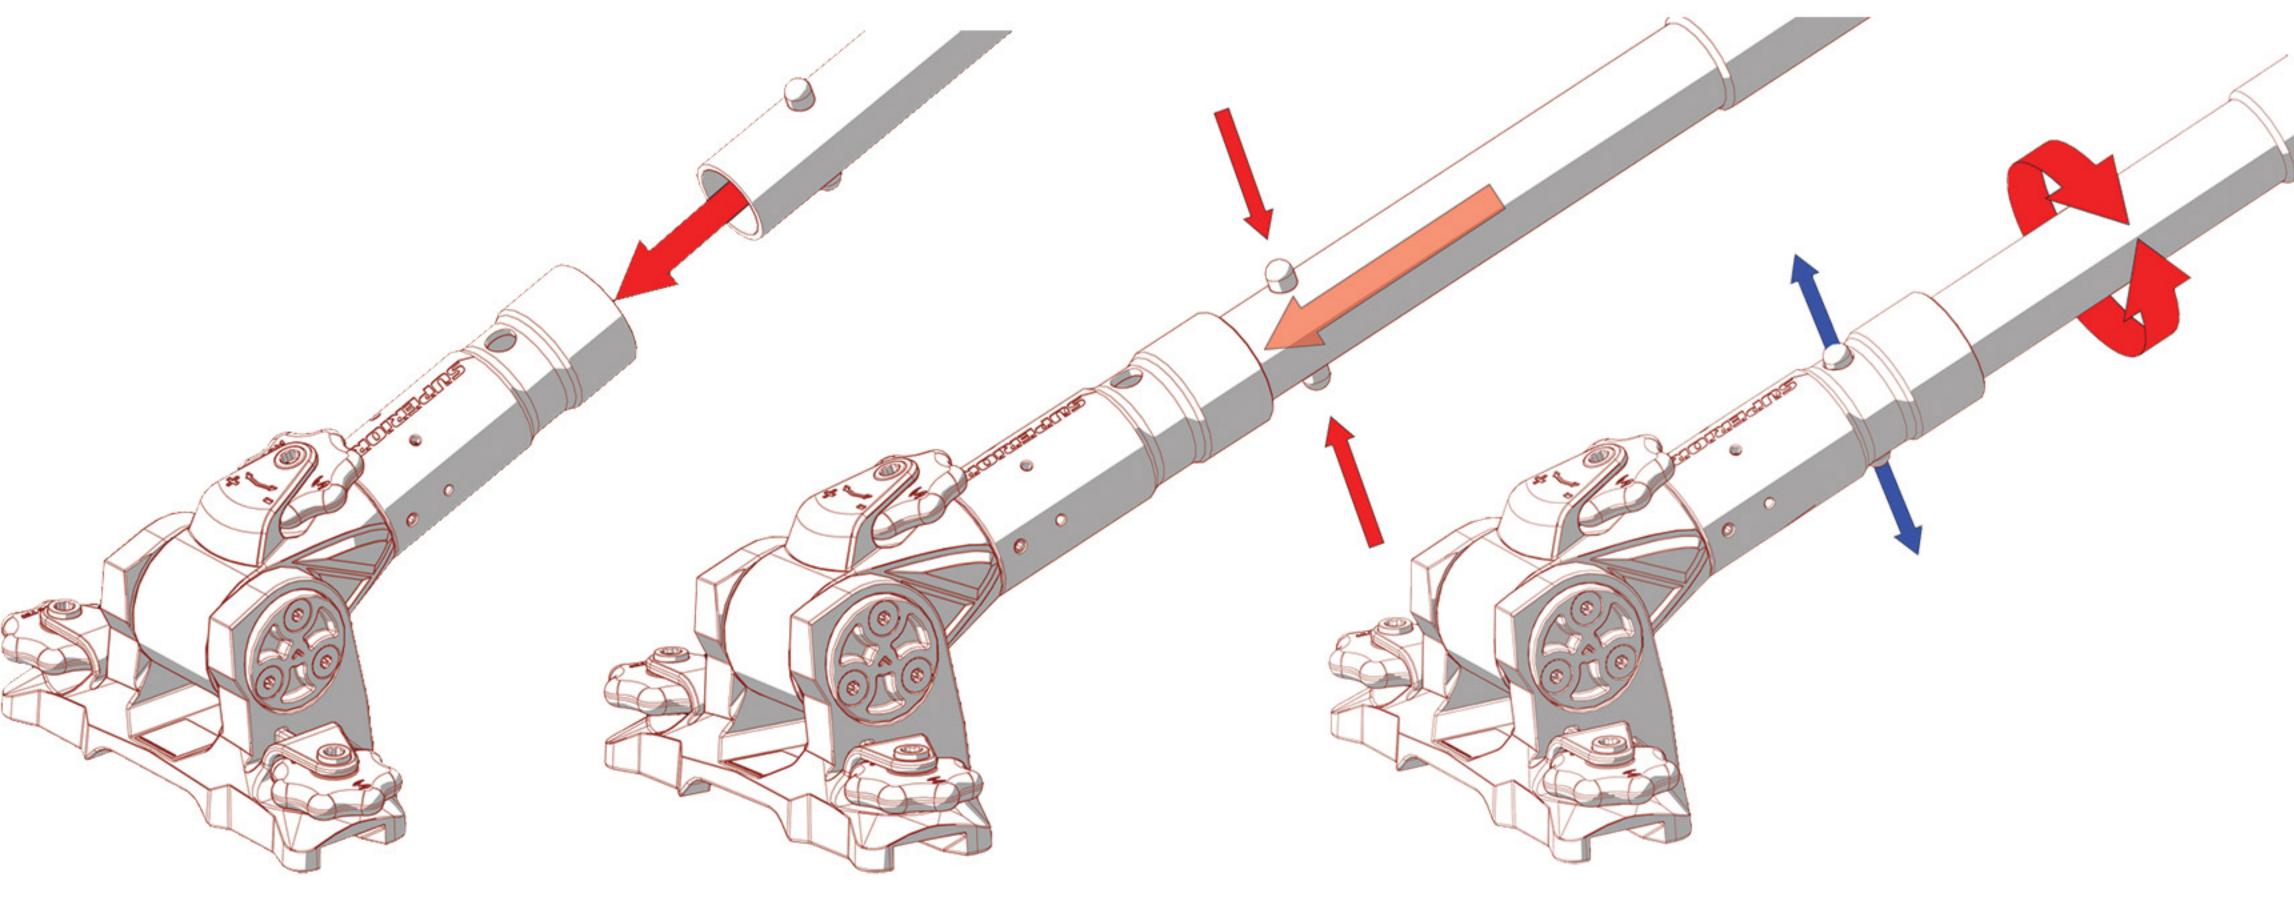

- 1. Slide the pole extension into the ProTilt handle slightly.
- 2. Compress the pins of the pole extension and continue to insert.
- 3. Release the pins once they pass the mount ans slightly rotate the pole until the pins are in the mount pin holes.



knob clockwise (+). The more you turn it - the more resistance.

to decrease the pivot resistance, turn the knob counter-clockwise (-).



Full manual available online at www.magvibe.com/manuals or scan the QR code with your smart phone camera

Customer Service: (844) 624-8423www.superiorinnovationsinc.com