

INSTALLATION PROCESS

During progress of work all QuicDiamonds shall be protected from damage and should be free of oil, dirt and concrete spatter.




STEP 1

After formwork is set up, locate and mark with chalk line the specified location, usually at center of slab but, at least 2 1/4" from top of slab.




STEP 2

Align QuicDiamond Sleeve centering along the chalkline. Using the preset nails, attach QuicDiamond Sleeve to formwork.

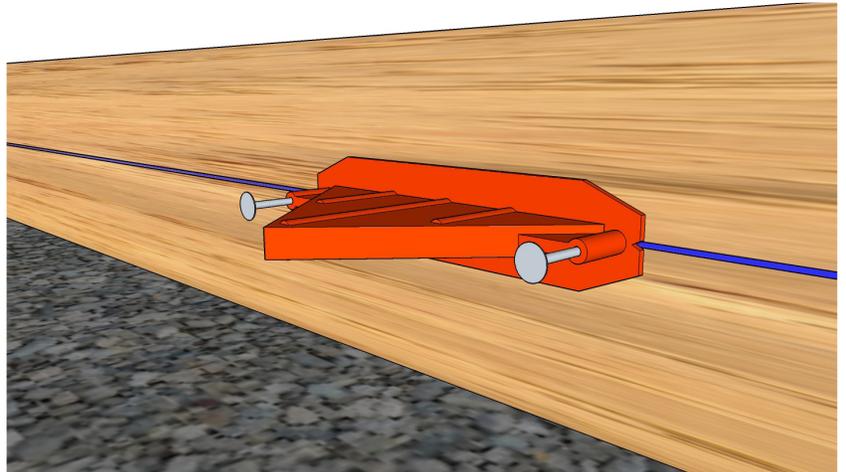


STEP 3

Check for all needed reinforcement.

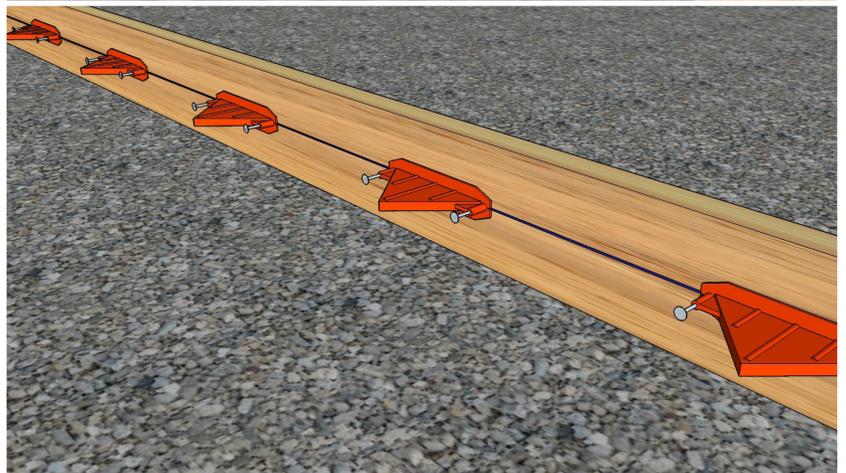

STEP 4

Pour at least 18 inches from QuicDiamonds, maneuver concrete around QuicDiamonds, vibrate, and finish concrete per ACI specifications.

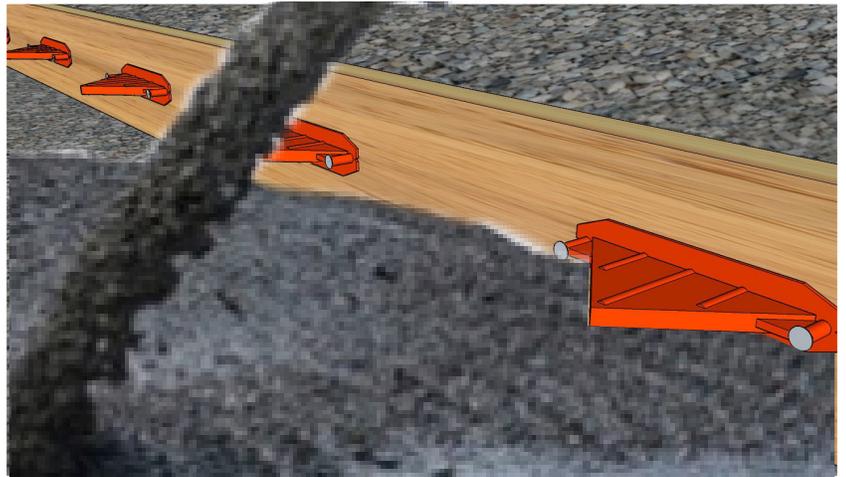


STEP 5

After concrete cures, remove formwork.



STEP 6

Bend nails away from plate. Insert QuicDiamond plates into sleeves.

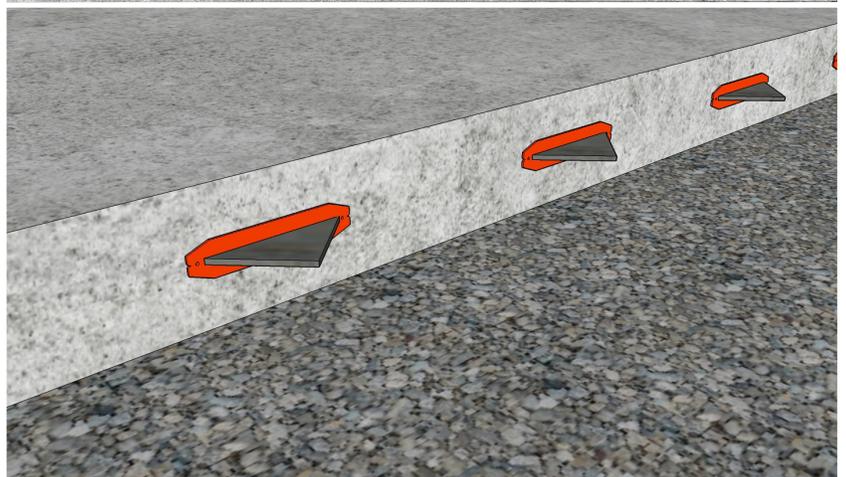

STEP 7

Pour at least 18 inches from QuicDiamond plates, maneuver concrete around plates, vibrate, and finish concrete per ACI specifications.

