
QUICK-START GUIDE





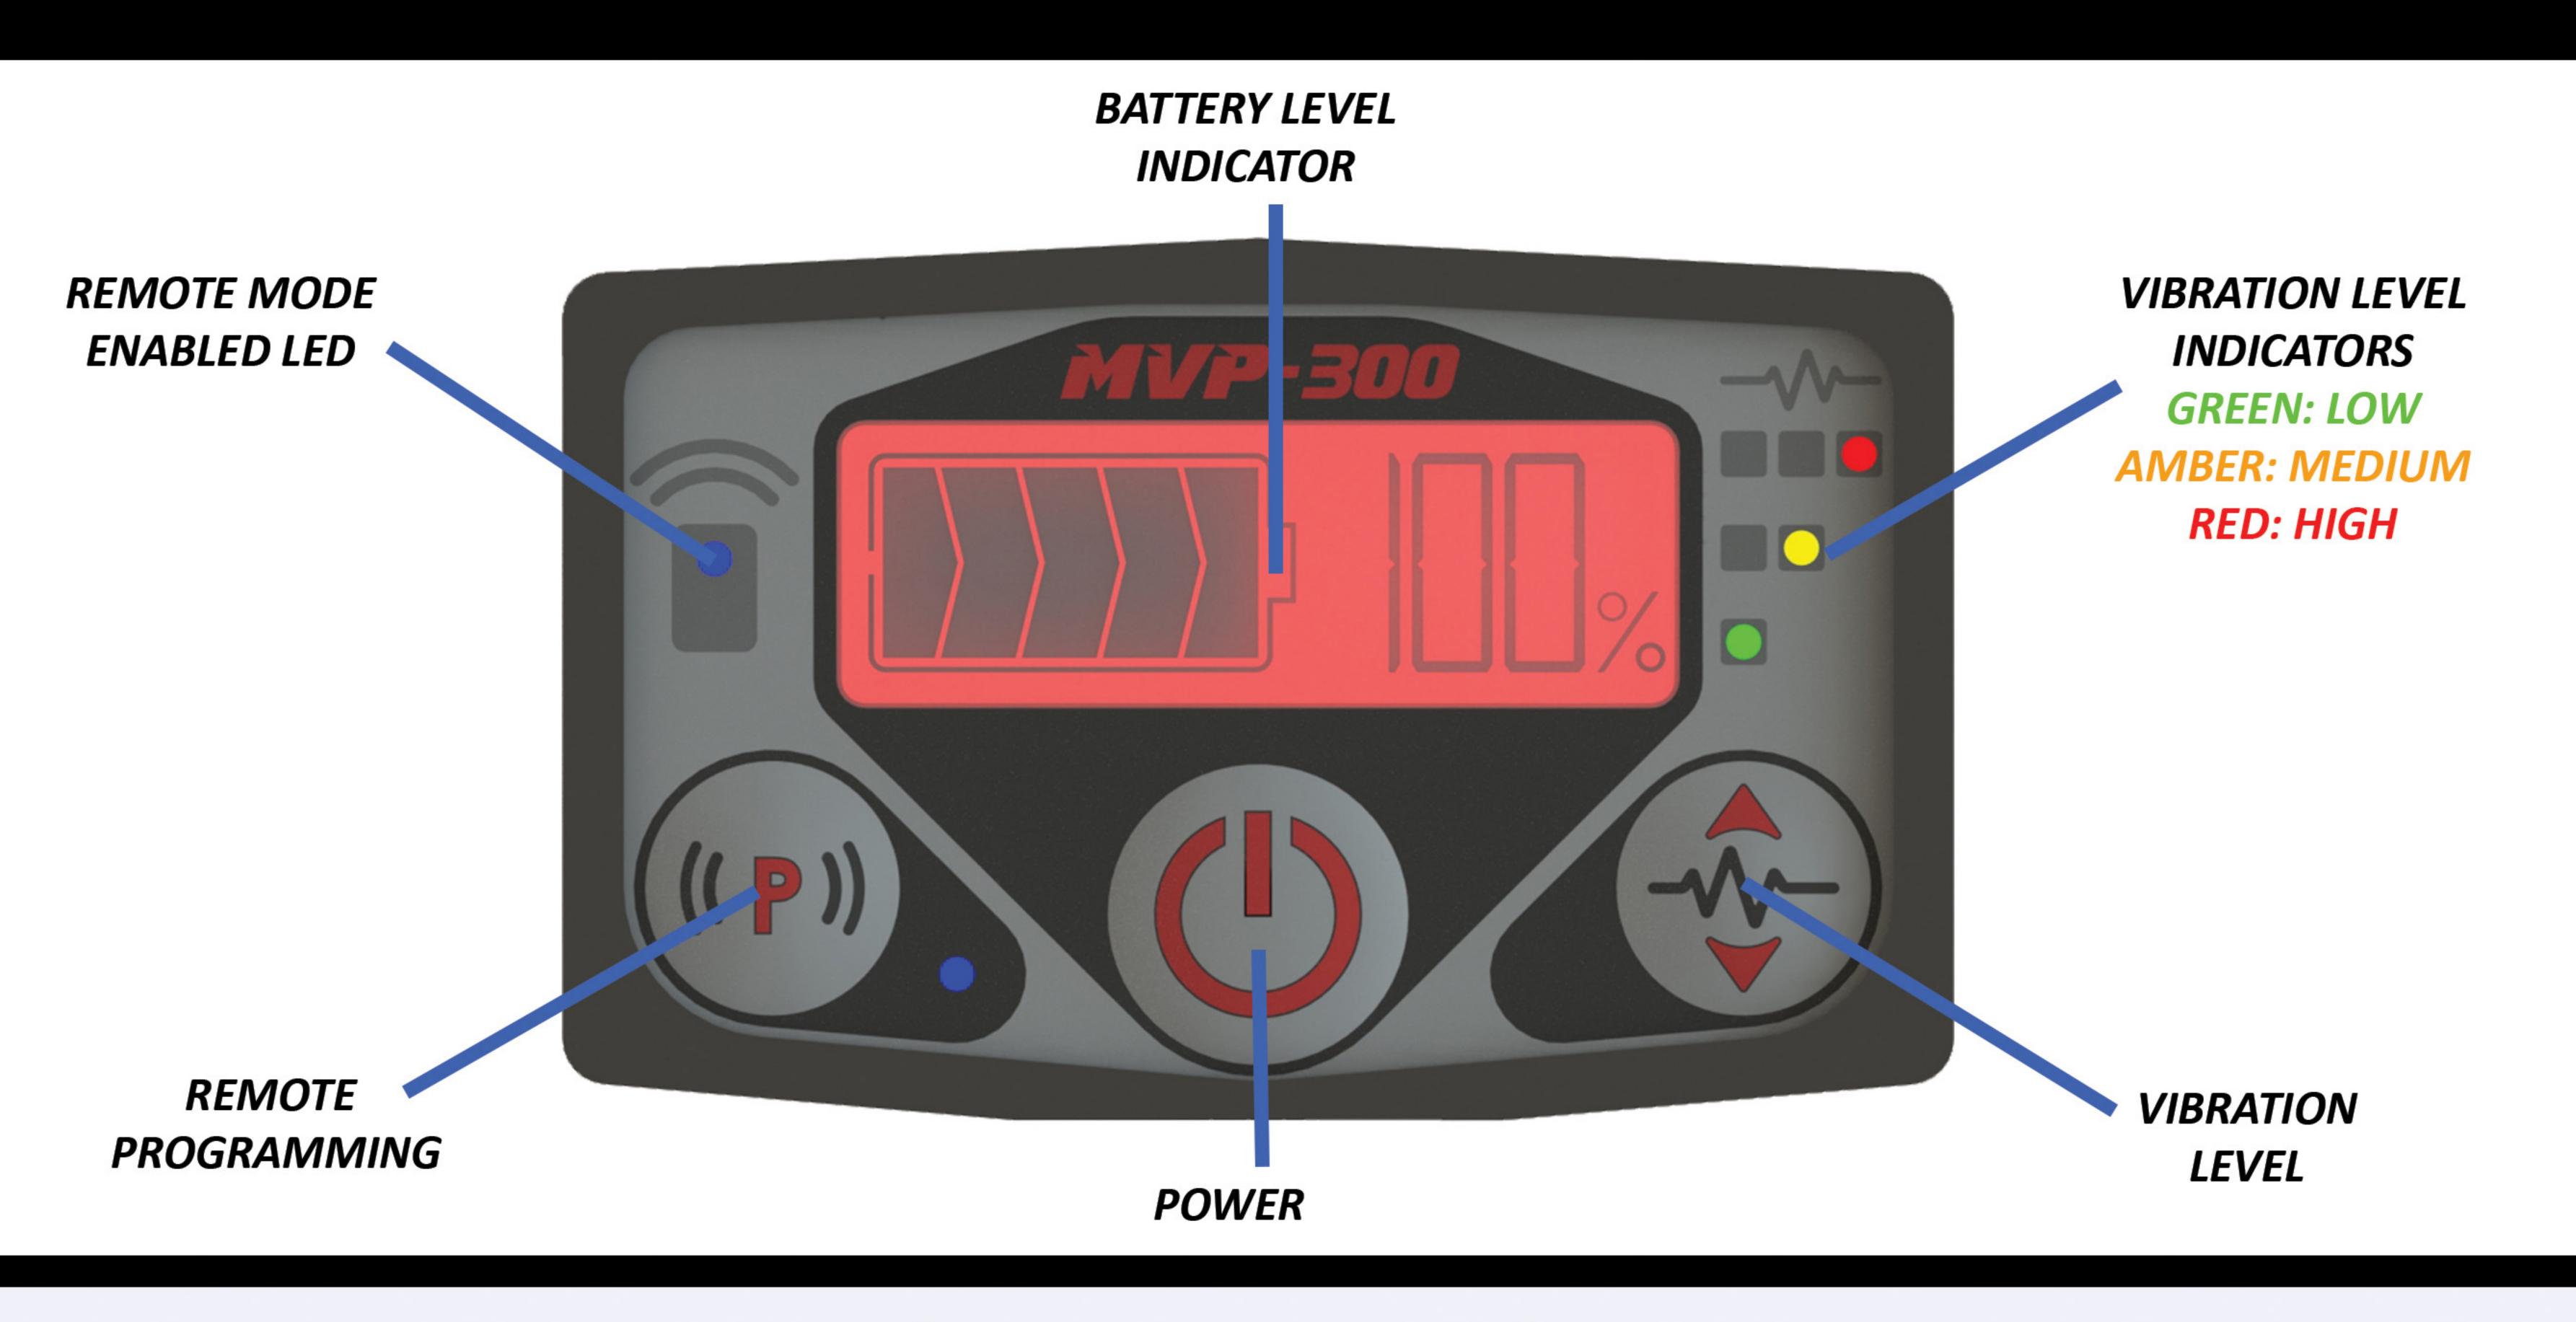



Manual Control

- 1. Press once.
- 2. Wait for battery indicator to come on.
- 3. Press (1) 2x within 1 second. Vibration will start in low.
- 4. Press to change the vibration level.
- 5. Press (1) 1x to turn it off.

RF Remote Control (Optional)

- 1. Press Once.
- 2. Wait for battery indicator to come on.
- 3. Press (he vibration will start in low.
- 4. Press to change the vibration level.
- 5. Press anytime to toggle on/off.
- 6. Press (1) 1x to turn it off.




Full manual available online at www.magvibe.com/manuals or scan the QR code with your smart phone camera

QUICK-START GUIDE









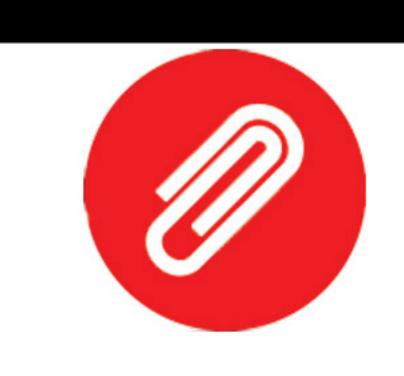

1. Slide the ProTilt onto MagVibe QAS mount.

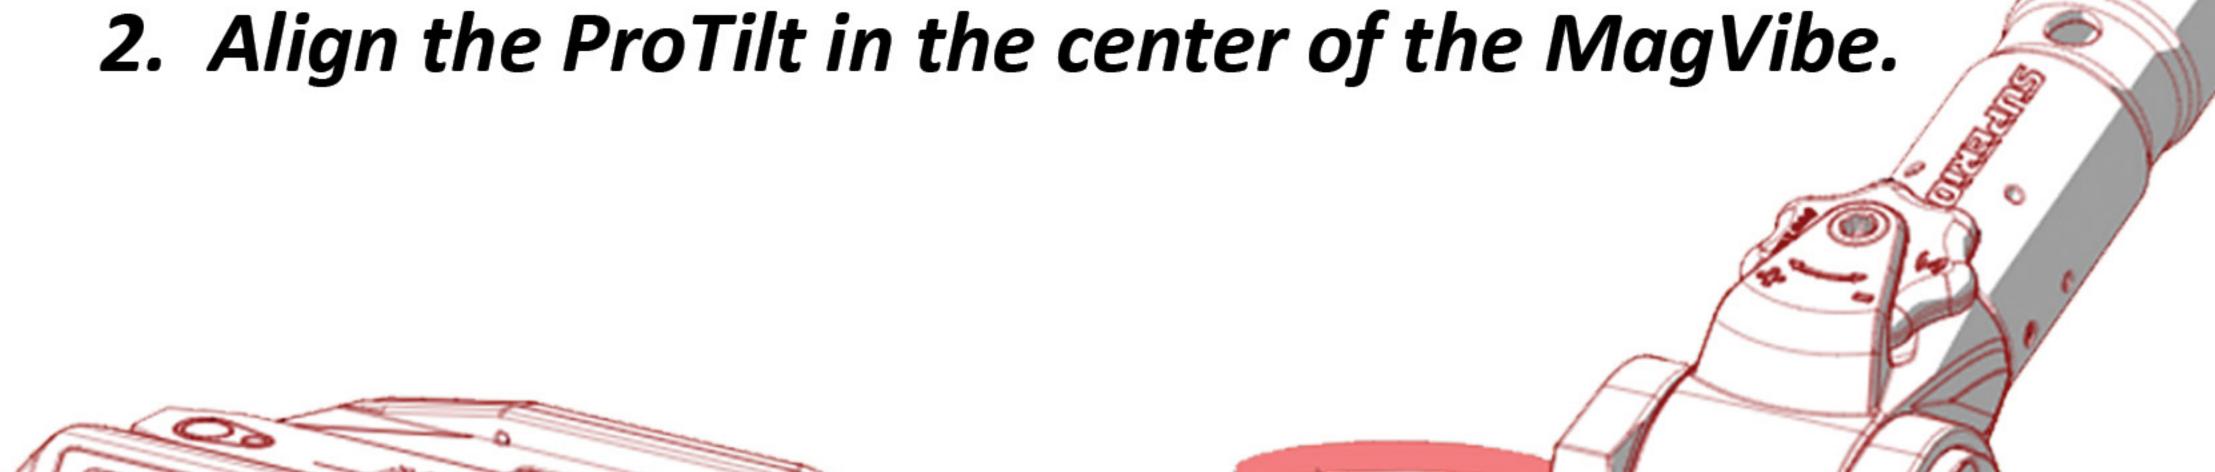


3. Slide the MagVibe and ProTilt onto the QAS of the float.

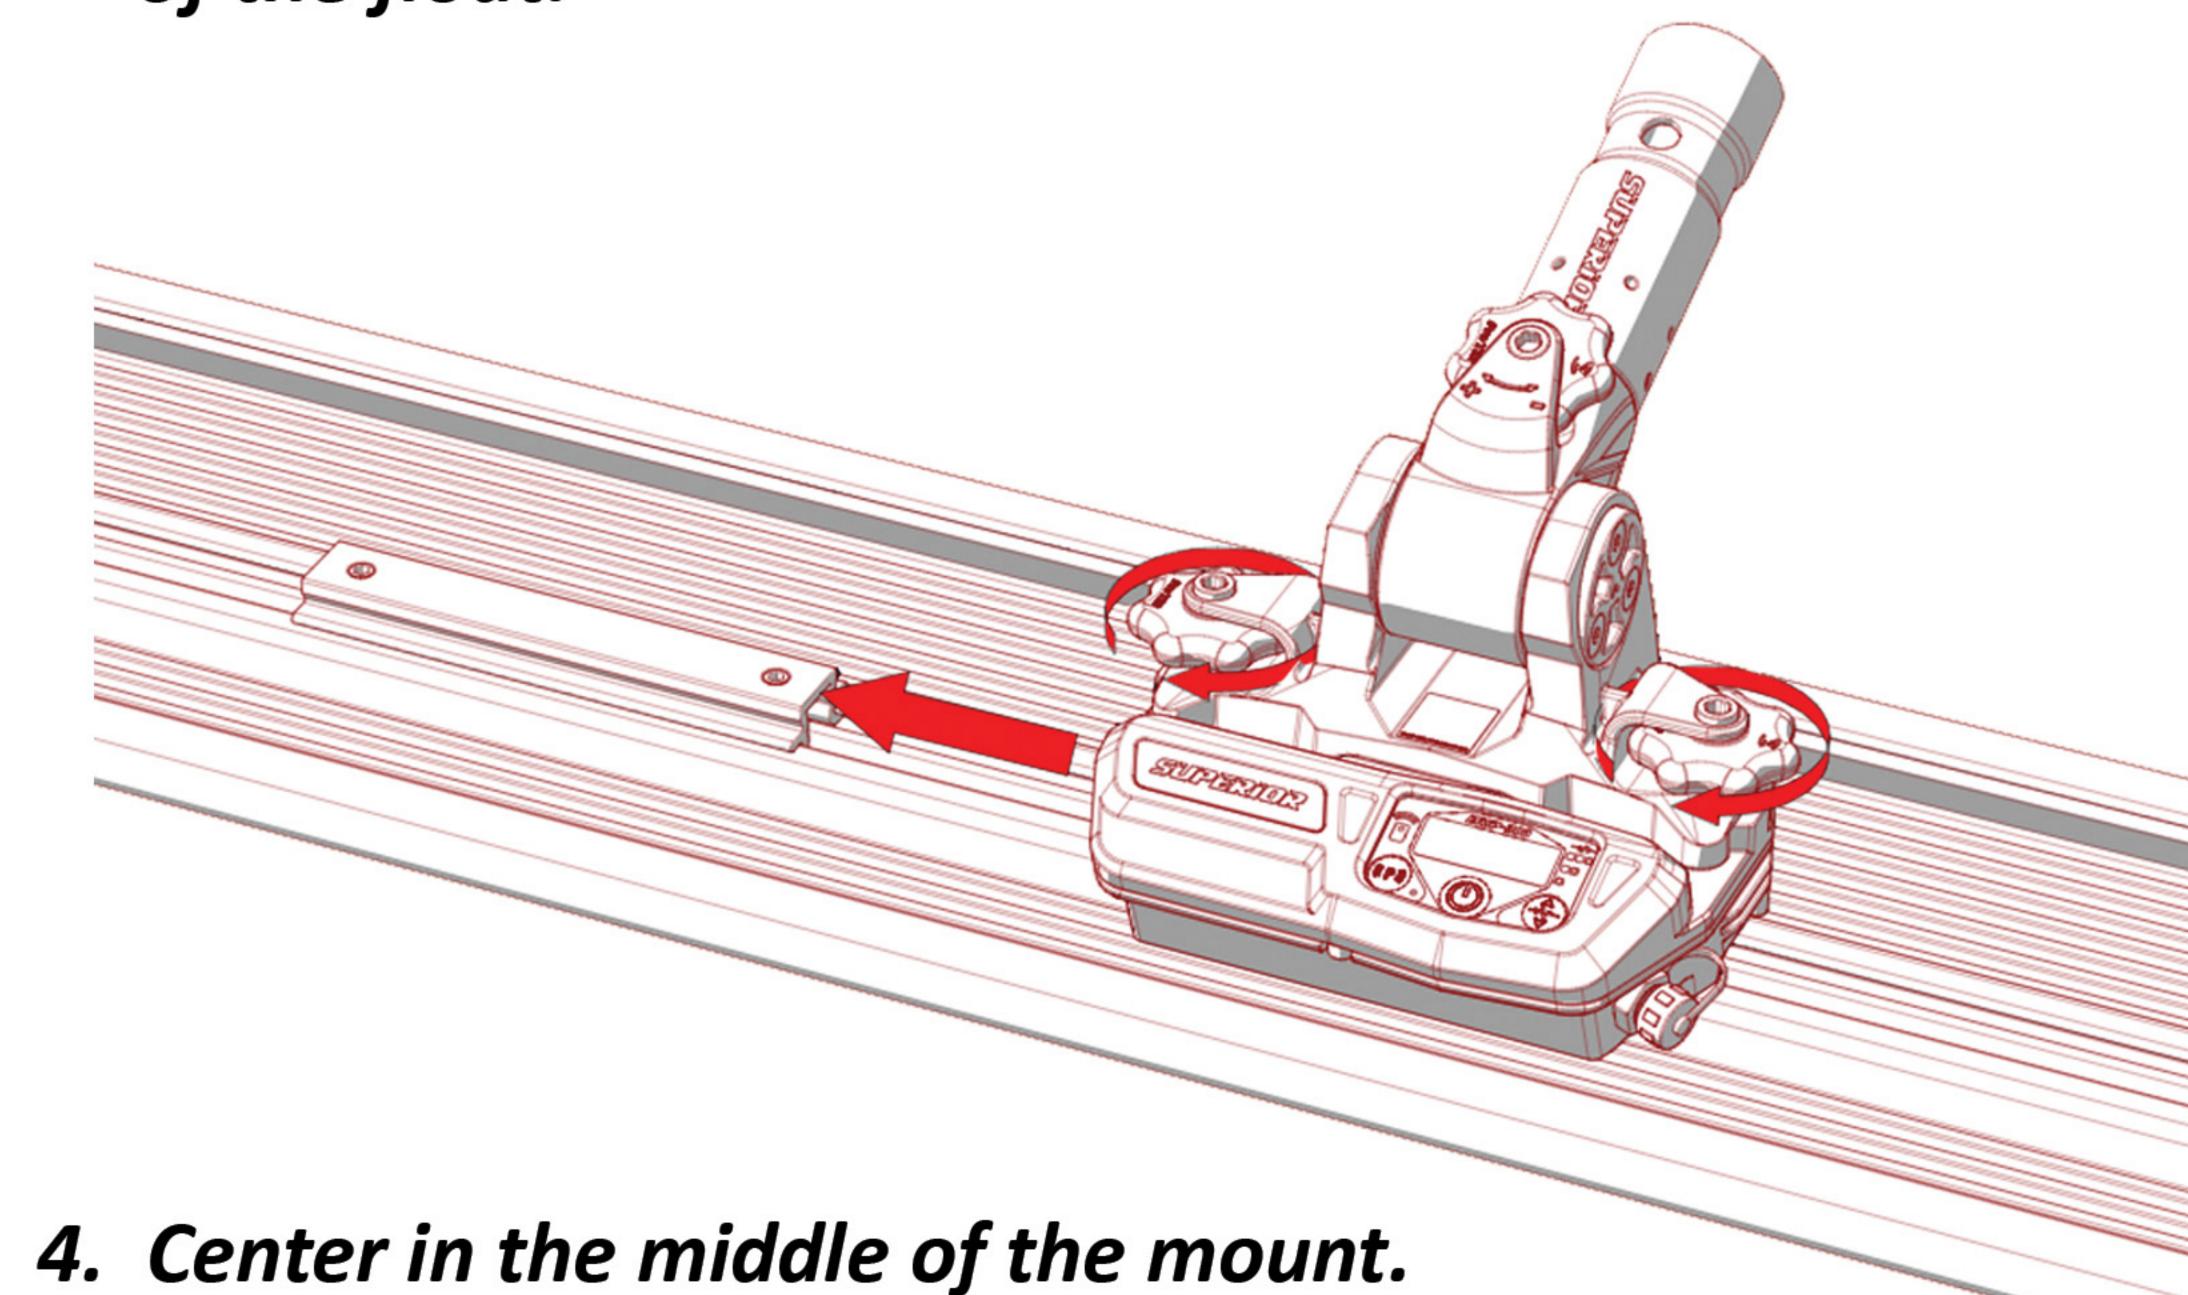


Charging




1. Unscrew canteen - seal cap to expose the charging port.

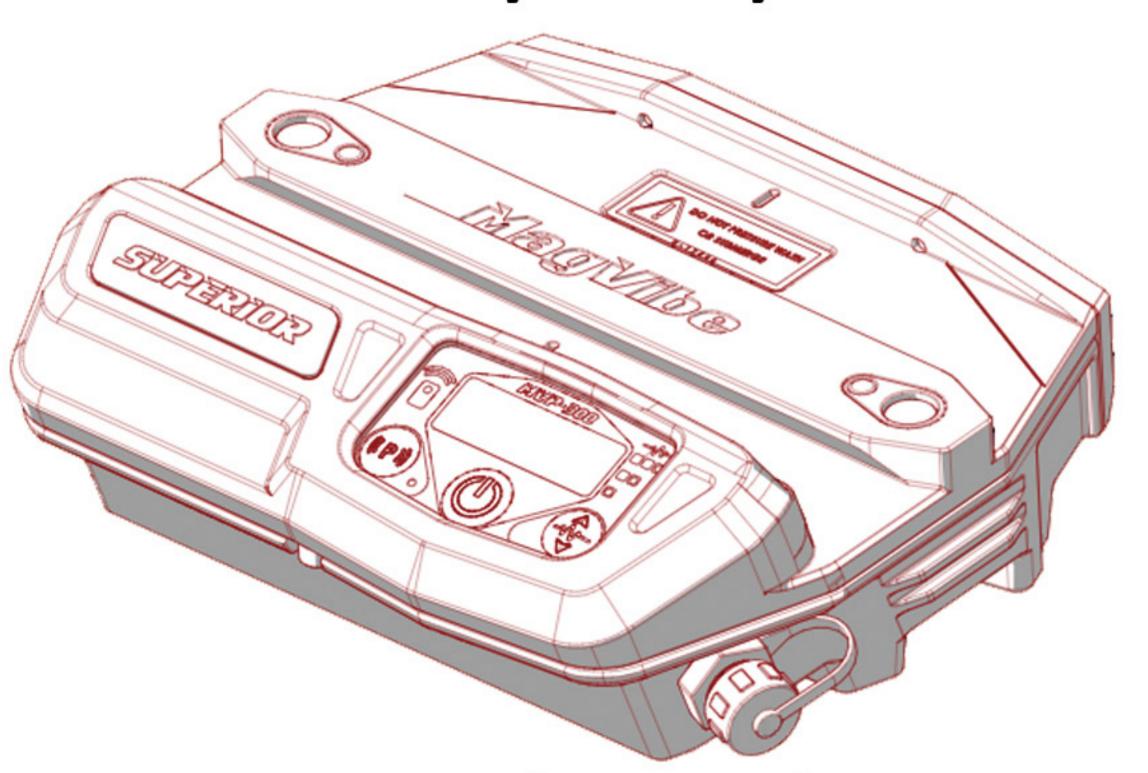

2. Screw charger output cord onto charger port.

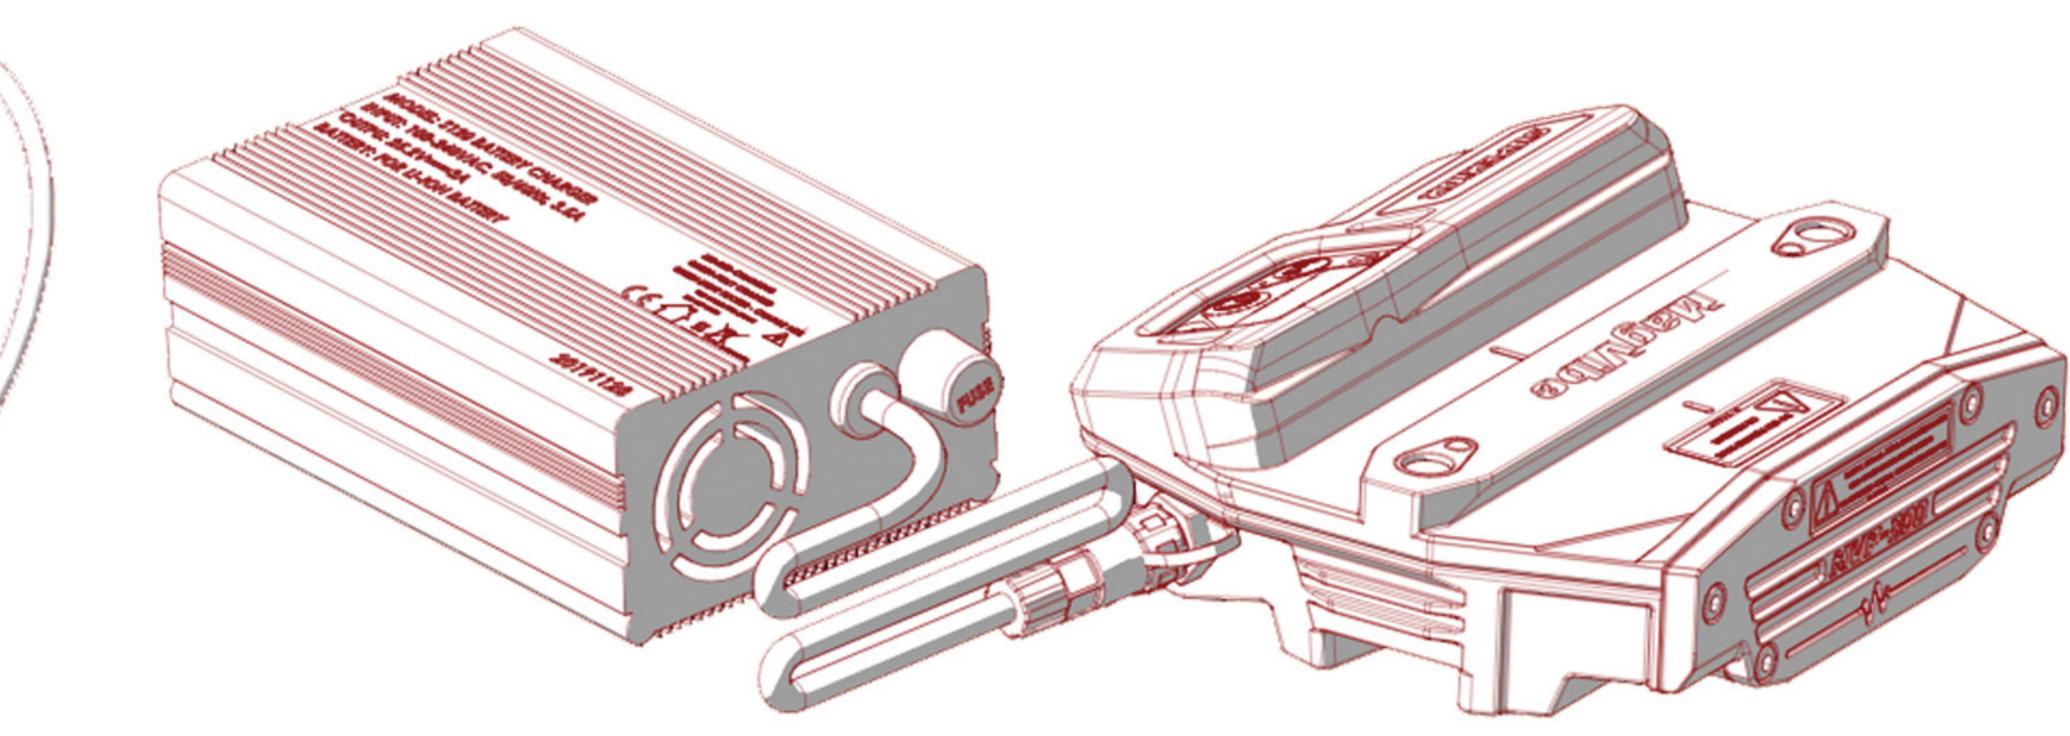

3. Plug charger in to the wall outlet.

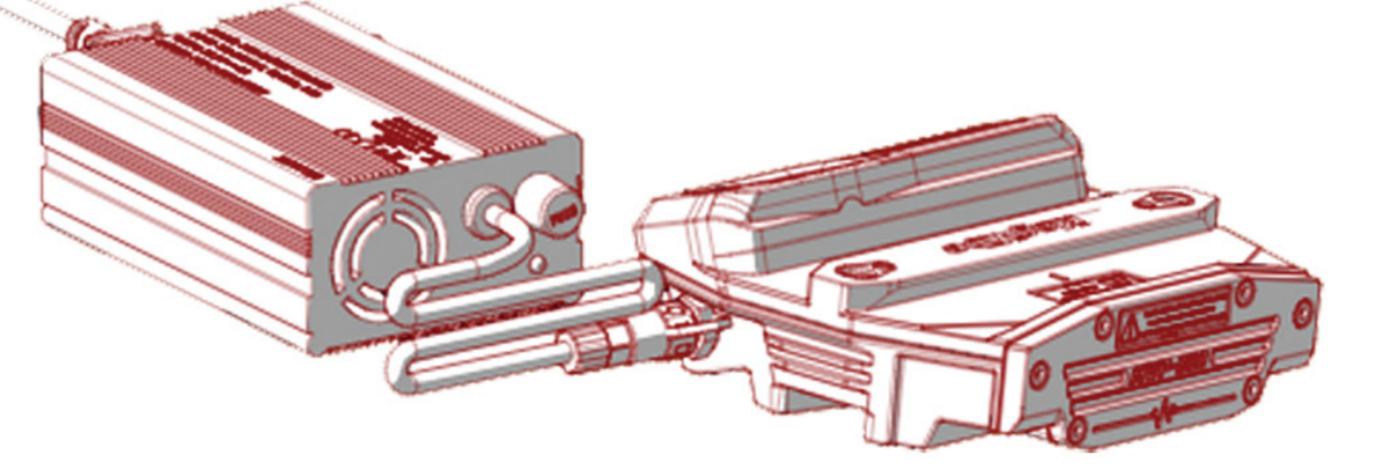

4. The LED will turn red and begin to charge.



DO NOT PRESSURE WASH OR SUBMERGE



BATTERY COVER PLATE

Full manual available online at www.magvibe.com/manuals or scan the QR code with your smart phone camera

5. Tighten knobs.

QAS RECEPTICLE

Customer Service: (844) 624 - 8423www.superiorinnovationsinc.com